

**GAPIX IP Cameras** DWC-MBW8Wi2TW



When logging into the camera for the first time, you must setup a new password. You can set the new password using the  $DW^*$  IP Finder software or directly from the camera's browser menu.

and Download 1 Plastic 1 set Anchors - 4pcs Guide Mounting Star Wrench 1 Template (T10, T20) Moisture Test Video Absorber 1 set and Guide Cable Co (Recommended) Waterproof Cap and Rubber Rings (Black: Ø0.15" (Ø4mm), White: Ø0.19" 1 set (ø5mm)) NOTE: Download all your support materials and tools in one place Go to: http://www.digital-watchdog.com/resources
Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click **'Search'**. All supported materials, including manuals

Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the user manual for more information on the proper installation, use and care of the product. These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected. Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

SAFETY AND WARNING INFORMATION

Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.

## generation or fire. Securely plug the power cord into the power source. An insecure connection may cause a fire. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury. Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock. Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects. Do not install in humid, dusty, or sooty locations. Doing so may cause fire or electric shock. Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) that produce heat.

that produce heat.

Keep out of direct sunlight and heat radiation sources. It may cause a fire. 12. 13. If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock. If this product does not operate normally, contact the nearest service center. Never disassemble or change this 14.

product in any way. When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or 15. electric shock. CAUTION Use proper safety gear when installing and wiring the product.

Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.

Do not use this product near water.

The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. 2.

be placed on the product. Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the

Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the image sensor.

The Main plug is used as a disconnect device and shall stay readily operable at any time.

Remove the power adapter from the outlet when then there is lightning. Neglecting to do so may cause fire or damage to the product.

Do not block any ventilation openings. Install following the manufacturer's instructions.

A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product. If any laser equipment is used near the product, make sure the surface of the sensor is not exposed to the laser beam as that may damage the sensor module.

end-user.

If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt.

Do not touch the camera's lens or sensor module with fingers. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device 15. Use only attachments/accessories specified by the manufacturer.

Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount.

Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product.

Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury

Unplug this product when a cart is used. Use caution when moving the cart product combination to avoid injury from tip-over.
 Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

Remove the Dessicant Pack from its shipping packaging. Fold the moisture absorber pack diagonally along the dotted line in the diagram below. Open the camera's control panel on the side of the camera.

necessary holes in the wall or ceiling. NOTE: The camera will generate enough heat to dry moisture during normal operation. In cases where the camera experiences a moisture issue, keep the moisture absorber in the camera.

> prevent moisture buildup inside the camera's housing, which may cause image performance issues or damage the camera.

> > Ø

0  √0<u>k</u> √O<sup>R</sup>

DEST de Folding in half

**™** 5 5Ø

RECORDER

SEAL TAPE

ا≡

bracket and use the gap as a cable guide to prevent cables from getting caught between the camera and the mounting


surface.

WHITE

YELLOW

SKY BLUE

GRAY + DOT

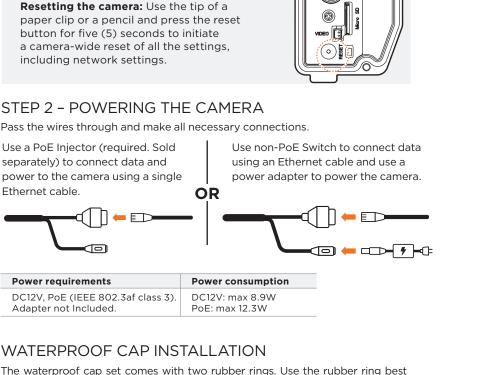

## **(**

CAMERA

🔯 4.5Ø

Cables with ø4.5mm to ø5.5mm thickness should use the black rubber ring. Cables over ø5.5mm in thickness should use the white

To ensure moisture seal, make sure the o-ring 🐽 is in place between 😉 and 📴. In extreme environments use of an outdoor

STEP 3 - INSTALLING THE CAMERA Secure the camera to the mounting surface using the included screws. 2. Loosen the pan and tilt screw on the camera's bracket to adjust the camera's view and position. Pan 360° Rotate 360° Tilt 90° 3. Remove the protective film from the lens cover. Softly wipe the lens cover with lens tissue or a microfiber cloth with ethanol to remove any dust or smudges left from the installation Rubber Plug NOTE: Remove the rubber plug on the side of the camera's

3. Press the card inward until it clicks to release from the card slot then pull out


Use the diagram below to properly connect power, network, audio, alarm and sensors to

DIN (+)

DIN (-)

DOUT (-)

DOUT (+)

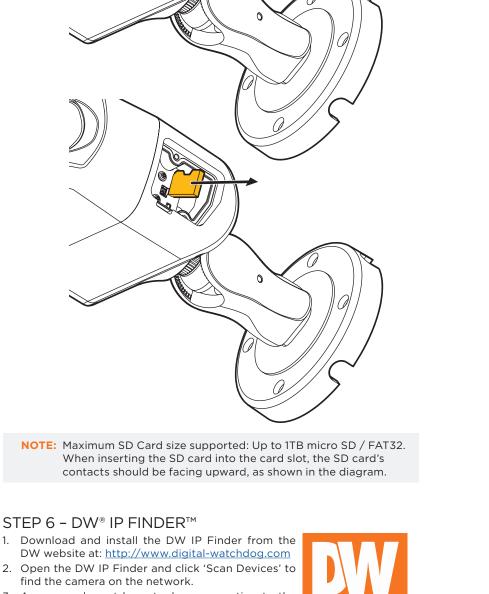

a. Check the box next to the camera. b. Click "Bulk Password Assign" on the left.

d. Click "change" to apply all changes.

the user ID.

STEP 7 - WEB VIEWER

If you did not set up a new username and password, a message will direct you to set up a new password for the camera to view the video.

Find the camera using the DW IP Finder.

http://192.168.10.159/ - IP Camera - Internet Explorer

- Change admin's password Retype Password
  - [ Type the Password ]

The GUI display may differ depending on the camera model.

uppercase letters, lowercase letters, numbers and special characters. Acceptable special characters are;  $\sim 1.5 () -1{}[]; ?$ CHANGE PASSWORD CHANGE LATER

This products is covered by one or more claims of the HEVC Patents listed at patentlist.accessadvance.com. digital-watchdog.com

3. A password must be set when connecting to the camera for the first time.

c. Enter admin/admin for the current username and password.

Password must have at least eight (8) characters and at least four (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot contain

Enter a new username and password to the right.

- 2. Double-click on the camera's view in the results table. Press the 'View Camera Website'. 4. Enter the camera's username and password you set up in the DW IP
  - Password requirement: minimum 8 characters with at least three combinations of

NOTE: Please see the full product manual for web viewer setup, functions and camera settings options.

 $\label{eq:copyright} \ \textcircled{opyright} \ \textcircled{optimize} \ Digital \ Watchdog. \ All \ rights \ reserved.$  Specifications and pricing are subject to change without notice.

NOTE: Tel: +1 (866) 446-3595 / (813) 888-9555

Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday

ON.

Default Login Information: admin | admin

WHAT'S IN THE BOX Quick Setup Screws and

Attention: This document is intended to serve as a quick reference for the initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

and quick start guide (QSGs) will appear in the results.

WARNING 3.

In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed.

Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.

Make sure the power supply voltage is correct before using the camera.

Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.

Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat. 4. 5.

6. 7. 8.

9. 11.

10. 11. beam as that may damage the sensor module. If you want to move the already installed product, be sure to turn off the power and then move or reinstall it. Proper configuration of all passwords and other security settings is the responsibility of the installer and/or 12. 13. end-user. 14.

16. 17. STEP 1 - PREPARING TO MOUNT THE CAMERA 1. Install the Dessicant Pack (moisture absorber):

Remove the Dessicant Pack used for shipping and place the new Dessicant Pack in the location shown in the illustration below. Close the camera control panel tightly. 2. Using the mounting template sheet or the camera itself, mark and drill the WARNING: Install the moisture absorber when mounting the camera to

sized for your network cable's diameter.

rubber ring.

rated sealer is recommended.

STEP 4 - CABLING

the camera.

STEP 5 - MANAGING THE SD CARD 1. Open the camera control panel on the side of the camera and locate the SD card slot. 2. Insert class 10 SD/SDHC/SDXC card into the SD card slot by pressing the SD card until it clicks.

from the slot.

Password Hint

Finder.

Rev: 01/25